

Important! Make sure that both set screws in the caster base are tight to the upright pole. If set screws are not tight the pole will be wobbly and can turn inside base causing wires to twist and separate.